

Trigger from inside the car

Condition			
Main group	Sub group	Additional selection	Selection
Tap to Trigger			Triggered only by tapping the Run button
Time	Time	Repeat	<Hour>:<Minute> Only once / Every day / Every week (Mon-Sun)
Enter/Exit Vehicle	Enter/Exit Vehicle	Driver	Enter / Exit
		Passenger	Enter / Exit
		Left rear	Enter / Exit
		Right rear	Enter / Exit
Door	Door	Driver	Open / Closed
		Passenger	Open / Closed
		Left rear	Open / Closed
		Right rear	Open / Closed
	Child Safety Lock	Left rear Right rear	Unlocked / Locked Unlocked / Locked
Lights	Rear Fog Light (Text change only)		On / Off
	Turn Signal	Left turn signal	On / Off
		Right turn signal	On / Off
	Hazard Lights		On / Off
Seatbelt	Driver Habit Switch		
	Passenger Seat Memory Switch		Standard / Entspannen / Ausruhen (Standard / Relax / Rest)
	Seatbelt	Driver	Fastened / Unfastened
		Passenger	Fastened / Unfastened
		Second row left	Fastened / Unfastened
		Second row middle	Fastened / Unfastened
Driving	Speed Reached		<0-180> km/h
	Gear Shift		In D Gear / In N Gear / In R Gear / In P Gear
Vehicle Control	Wiper switch		OFF / AUTO / LO / HI
	Side Mirror		Folded / Unfolded
Device Connection	Bluetooth		On / Off
	Wired Projection	Driver	Start / End
Charging & Range	Charging Cable Plug/Unplug		When plugged in / When unplugged
	Charging Status		When charging starts / When charging ends
	Remaining Electric Range Reached (Text change only)		<0-1000> km
	Charging Range Reached		<0-1000> km
	Estimated Remaining Charging Time		Less than <0-6> hr <0-59> min
Sentry Mode	Sentry Mode		On / Off
Environment	Interior Temperature Reached		<-10°C and below - 60°C and above>
	Exterior Temperature Reached		<-40°C - 45°C>
	Ambient Lighting Partial Config.	Enter / Exit	Darkness / Evening/Overcast / Outdoor daytime
Navigation & Location	Vehicle Arrival		<Select location> / Range radius 200-1000m
	Vehicle Departure		<Select location> / Range radius 200-1000m
	Estimated Time of Arrival (Navigation)		Less than <0-23> hr <0-59> min
	Estimated Distance to Arrival (Navigation)		Less than <200-1000> m

Trigger from inside the car

Status			
Main group	Sub group	Additional selection	Selection
Time	Time Range		Start <clock> / End <clock>
		Repeat	Every day / Every week <Mon-Sun>
Door & Window Lock	Door	Driver	Open / Closed
		Passenger	Open / Closed
		Left rear	Open / Closed
		Right rear	Open / Closed
			Open / Closed
	Trunk		Open / Closed
	Hood		Open / Closed
	Windows	Driver	Open / Closed
		Passenger	Open / Closed
		Second row left	Open / Closed
		Second row right	Open / Closed
	Door Lock		Locked / Unlocked
Lights	Low Beam Headlights		On / Off
			On / Off
	Turn Signal	Left turn signal	On / Off
		Right turn signal	On / Off
	Hazard Lights		On / Off
			On / Off
Seatbelt	Seat Occupancy Status	Driver	Unoccupied / Occupied
		Passenger	Unoccupied / Occupied
		Second row left	Unoccupied / Occupied
		Second row middle	Unoccupied / Occupied
		Second row left	Unoccupied / Occupied
	Seatbelt Status	Driver	Fastened / Unfastened
		Passenger	Fastened / Unfastened
		Second row left	Fastened / Unfastened
		Second row middle	Fastened / Unfastened
		Second row left	Fastened / Unfastened
Driving	Vehicle Speed		<0-180> km/h
	Gear		D Gear / N Gear / R Gear / P Gear
Vehicle Control	Driver Wireless Charging		Charging / Not charging
	Passenger Side Wireless Charging		Charging / Not charging
	Wiper		OFF / AUTO / LO / HI
Vehicle Location	Vehicle located at		<Select location> / Range radius 200-1000m
	Vehicle not located at		<Select location> / Range radius 200-1000m
Charging & Range	Charging Status		Preparing / Scheduling / Charging / Charging complete / Error
	Remaining Electric Range (Text change only)		<0-1000> km
Environment	Interior Temperature		Select from -10°C and below to 60°C and above
	Exterior Temperature		Select from -40°C to 45°C
	Ambient Lighting Partial Config.	Equal to / Not equal to	Darkness / Evening/Overcast / Outdoor daytime

Trigger from inside the car

Action			
Main group	Sub group	Additional selection	Selection
Advanced	Until the condition is met	Show area "Condition & Status"	
	If the condition is met	Show area "Condition & Status"	
	Wait		<0-59> min : <0-59> s
	Stop running this Combo		(only selected)
Voice Assistant	XPENG-Announcement	+ Add Speech	<Please enter your content>
Door & Window Lock	Trunk		Open / Close
	Window Switch	Driver	All close / Open <5-95>% / All open
		Passenger	All close / Open <5-95>% / All open
		Left rear	All close / Open <5-95>% / All open
		Right rear	All close / Open <5-95>% / All open
	Window Ventilation		Open / Close
	All door locks		Lock / Unlock
	Child Lock	Hinten links	Lock / Unlock
		Hinten rechts	Lock / Unlock
	Window Lock		Lock / Unlock
	Diisable auto-lock on departure		(only selected)
Lights	Headlights Control		Headlights Off / Side Lights On / Low Beams On / Automatic Headlights On
	Rear Fog Light		On / Off
	Reading Light	Driver	On / Off
		Passenger	On / Off
		Second row left	On / Off
		Second row right	On / Off
	Ambient Light Switch		On / Off
	Ambient Light Brightness		<10-100> %
	Ambient Light Mode & Color	Fixed brightness	Fixed Color / Color Loop
		Smooth breathing	Fixed Color / Color Loop
		Follows speed	Fixed Color / Color Loop
		Music rhythm	Fixed Color / Color Loop
Seatbelt	Driver Habit Switch		<Please enter your content>
	Driver Seat Position	Front & Rear	Level 1 (Low / Level 2 / Level 3 / Level 4 / Level 5 / Level 6 (High)
		Backrest	Level 1 (Low / Level 2 / Level 3 / Level 4 / Level 5 / Level 6 (High)
		Height	Level 1 (Low / Level 2 / Level 3 / Level 4 / Level 5 / Level 6 (High)
		Seat Cushion height	Level 1 (Low / Level 2 / Level 3 / Level 4 / Level 5 / Level 6 (High)
	Passenger Seat Memory		Standard / Entspannen / Ausruhen (Standard / Relax / Rest)
	Passenger Seat Position	Front & Rear	Level 1 (Low / Level 2 / Level 3 / Level 4 / Level 5 / Level 6 (High)
		Backrest	Level 1 (Low / Level 2 / Level 3 / Level 4 / Level 5 / Level 6 (High)
		Height	Level 1 (Low / Level 2 / Level 3 / Level 4 / Level 5 / Level 6 (High)
	Seat Reset		Driver / Passenger
	Seat Ventilation	Driver	Off / Level 1 / Level 2 / Level 3
		Passenger	Off / Level 1 / Level 2 / Level 3
	Seat Heating	Driver	Off / Level 1 / Level 2 / Level 3
		Passenger	Off / Level 1 / Level 2 / Level 3
		Second row left partial config.	Off / Level 1 / Level 2 / Level 3
		Second row right partial config.	Off / Level 1 / Level 2 / Level 3
	Seat Massage Mode	Driver partial config.	Off / Release stress / Awaken vitality / Physical recovery / Leisure relax / Long-haul relax / Lumbar massage
		Passenger partial config.	Off / Release stress / Awaken vitality / Physical recovery / Leisure relax / Long-haul relax / Lumbar massage
	Seat Massage Intensity	Driver partial config.	High / Medium / Low
		Passenger partial config.	High / Medium / Low

Trigger from inside the car

			Action
AC	Front Air Conditioning Switch (Text change only)		On / Off
	Front Air Conditioning AUTO (Text change only)		On / Off
	AC		On / Off
	Temperature	Driver	LO / <16-32> °C / HI
		Passenger	LO / <16-32> °C / HI
	Front Fan Speed (Text change only)		Level <1-10>
	Air Circulation		Internal circulation / Externasl circulation
	Rapid Cooling		On / Off
	Rapid Heating		On / Off
	Intelligent Deodorization		On / Off
	Air Purification		On / Off
	Energy-Saving Mode		On / Off
	Front Blow Mode (Text change only)		Face / Feet / Windows
	Front defog		On / Off
	Driving	Rear Defog	
Heating Mirrors		On / Off	
Steering Wheel Heating		Off / Level <1-3>	
Driving Mode		ECO / Comfort / Sport / Individual	
Energy Recovery		XPEDAL / High / Medium / Low	
Sterring Assistance		Light / Medium / Heavy	
Drive Status Warning		Enable / Disable	
Emergency Lane Keeping		Alert Sound+Correction / Alert+Correction	
Intelligent Speed Limit Assist Warning Sound		Enable / Disable	
Display		Screen Display Switch	Driver screen
	Screen Brightness Setting	Driver screen	<1-100> %
		Dashboard	<1-100> %
	Auto Screen Switch	Driver screen	On / Off
		Dashboard	On / Off
	Day/Night Mode		Automatic / Day / Night
Sound	Volume	Media	<0-19>
		Navigation	<0-19>
		Voice	<0-19>
	Sound Field Setting		Front center / Entire car center / Rear center
	Sound mode (Text change only)		Dynamic / Original / Cinematic
Device Connection	Driver Audio Mode		Shared Mode / Driving Mode / Private Mode
	Bluetooth-Switch		On / Off
	Bluetooth Connected Devices		<Device aktivate>
	In-vehicle Hotspot		On / Off
Vehicle Control	Side Mirror		Unfold / Fold
	Horn		(only selecteed)
	Driver Wireless Charging Switch		On / Off
Trunk Power	Trunk Power Delay Off		On / Off
	Trunk Power Delay Off Cycle & Duration	Once only	1 hour / 3 hours / 6 hours / 12 hours / 24 hours
		Every time	1 hour / 3 hours / 6 hours / 12 hours / 24 hours
Charging Energy	Charging Port Cover		Open / Close
	End Charging		(only selecteed)
	Charging Limit Setting		<50-100> %
Sentry Mode	Sentry Mode		On / Off
360 Camera	Open Image		Front view / Rearview / Left view / Right view / Four wheel hub view / Front wheel hub view
	Open 3D Image		Front view / Rearview / Left view / Right view / Left front view / Right front view / Left rearview / Right rearview
	Close Image		(only selecteed)
Navigation	Navigation Destination		<Select location>
	Exit Navigation		(only selecteed)
Send Notification	Send Phone Notification	Push to <authorised persons>	Push message <Please enter your content>

Trigger remotely

Condition			
Main group	Sub group	Additional selection	Selection
Tap to Trigger			Triggered only by tapping the Run button
Time	Time		<Hour> : <Minute>
		Repeat	Only once / Every day / Every week (Mon-Sun)
Vehicle Locked & Power Off			When Vehicle Locked & Power Off
Charging & Range	Charging Range Reached		<0-1000> km
	Estimated Remaining Charging Time		Less than <0-6> hr <0-59> min
Sentry Mode			When Sentry Mode is triggered (You need to turn on the Sentry Mode first)

Status			
Door & Window Lock	Windows	Driver	Open / Closed
		Passenger	Open / Closed
		Second row left	Open / Closed
		Second row right	Open / Closed
Vehicle Location	Vehicle located at		<Select location> / Range radius 200-1000m
	Vehicle not located at		<Select location> / Range radius 200-1000m
Environment	Interior Temperature		Select from -10°C and below to 60°C and above
	Exterior Temperature		Select from -40°C to 45°C

Action			
Advanced	Until the condition is met	Show area "Condition & Status"	
	If the condition is met	Show area "Condition & Status"	
	Wait		<0-59> min : <0-59> s
	Stop running this Combo		(only selected)
Seat	Seat Ventilation	Driver	Off / Level 1 / Level 2 / Level 3
		Passenger	Off / Level 1 / Level 2 / Level 3
	Seat Heating	Driver	Off / Level 1 / Level 2 / Level 3
		Passenger	Off / Level 1 / Level 2 / Level 3
		Second row left partial config.	Off / Level 1 / Level 2 / Level 3
		Second row right partial config.	Off / Level 1 / Level 2 / Level 3
AC	Front Air Conditioning Switch (Text change only)		On / Off
	Front Air Conditioning AUTO (Text change only)		On / Off
	AC		On / Off
	Temperature	Driver	LO / <16-32> °C / HI
		Passenger	LO / <16-32> °C / HI
	Front Fan Speed (Text change only)		Level <1-10>
	Air Circulation		Internal circulation / External circulation
	Rapid Cooling		On / Off
	Rapid Heating		On / Off
	Air Purification		On / Off
	Front Defog		On / Off
	Rear Defog		On / Off
	Heated Mirrors		On / Off
Vehicle Control	Horn		(only selected)
Sentry Mode	Sentry Mode		On / Off
Send Notification	Send Phone Notification	Push to <authorised persons>	Push message <Please enter your content>